MOTOROLA

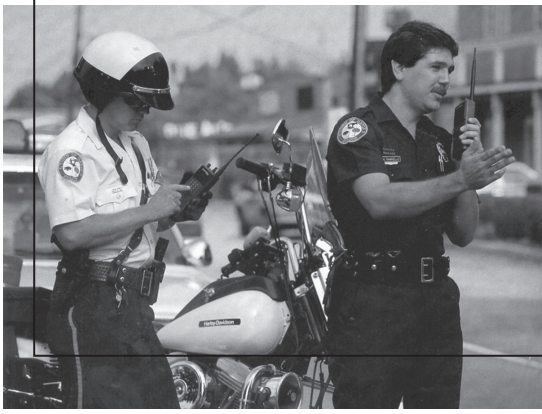

# *ASTRO® XTS™ 5000 Digital Portable Radio*

## *Model I*

## *User Guide*

# ASTRO® XTS™ 5000 Digital Portable Radio, Model I Quick Reference Card

## Product Safety and RF Exposure Compliance

Caution — Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.

### ATTENTION!

This radio is restricted to occupational use only to satisfy FCC RF energy exposure requirements. Before using this product, read the RF energy awareness information and operating instructions in the Product Safety and RF Exposure booklet enclosed with your radio (Motorola Publication part number 68P81095C98) to ensure compliance with RF energy exposure limits.

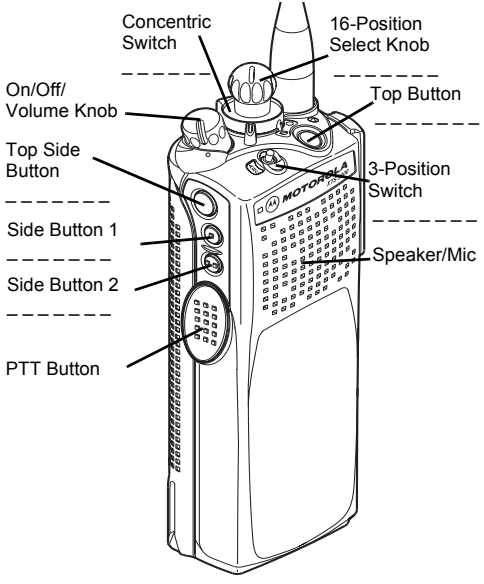


Write your radio's programmed features on the dashed lines.

## Radio On/Off

1. On - **On/Off/Volume** knob clockwise.
2. Off - **On/Off/Volume** knob counterclockwise.

## Zones/Channels

1. Zone - **Zone** switch to desired zone.
2. Channel - **Channel** switch to desired channel.

## Receive/Transmit

1. Radio on and select zone/channel.
2. Listen for a transmission.
   *- or -*
   Press and hold **Volume Set** button.
   *- or -*
   Press **Monitor** button and listen for activity.
3. Adjust volume, if necessary.
4. Press **PTT** to transmit; release to receive.

## Send Emergency Alarm

Radio on and press **Emergency** button. You see red LED; you hear short, medium-pitched tone.

Note: To exit emergency at any time, press and hold **Emergency** button.

When acknowledgment is received, you hear four beeps; alarm ends; radio exits emergency.

## Send Emergency Call

1. Radio on and press **Emergency** button.

Note: To exit emergency at any time, press and hold **Emergency** button.

2. Press and hold **PTT**. Announce your emergency into the microphone.
3. Release **PTT** to end call.
4. Press and hold **Emergency** button to exit emergency.

## Send Silent Emergency Alarm

1. Radio on and press **Emergency** button. You see no LED; you hear no tone.

Note: To exit emergency at any time, press and hold **Emergency** button.

2. Silent emergency continues until you:
   - Press and hold **Emergency** button to exit emergency state.
     - or -
   - Press and release **PTT** to exit silent emergency and enter regular emergency (alarm, call, or alarm with call).

This declaration is applicable to your radio *only* if your radio is labeled with the FCC logo shown below.

## DECLARATION OF CONFORMITY

Per FCC CFR 47 Part 2 Section 2.1077(a)

Responsible Party
Name: Motorola, Inc.

Address: 1301 E. Algonquin Rd, Schaumburg, IL 60196-1078 USA

Phone Number: 1-800-927-2744

Hereby declares that the product:

Model Name: **XTS 5000**

conforms to the following regulations:

FCC Part 15, subpart B, section 15.107(a), 15.107(d) and section 15.109(a)

**Class B Digital Device**

As a personal computer peripheral, this device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

**If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:**

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Product Safety and RF Exposure Compliance

**Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.**

### ATTENTION!

**This radio is restricted to occupational use only to satisfy FCC RF energy exposure requirements. Before using this product, read the RF energy awareness information and operating instructions in the Product Safety and RF Exposure booklet enclosed with your radio (Motorola Publication part number 68P81095C98) to ensure compliance with RF energy exposure limits.**

## Computer Software Copyrights

The Motorola products described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs, including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

## Documentation Copyrights

No duplication or distribution of this document or any portion thereof shall take place without the express written permission of Motorola. No part of this manual may be reproduced, distributed, or transmitted in any form or by any means, electronic or mechanical, for any purpose without the express written permission of Motorola.

## Disclaimer

The information in this document is carefully examined, and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies. Furthermore, Motorola reserves the right to make changes to any products herein to improve readability, function, or design. Motorola does not assume any liability arising out of the applications or use of any product or circuit described herein; nor does it cover any license under its patent rights, nor the rights of others.

MOTOROLA, the Stylized M Logo and ASTRO are registered in the U.S. Patent & Trademark Office. All other product or service names are the property of their respective owners.

P25 radios contain technology patented by Digital Voice Systems, Inc.

© Motorola, Inc. 2003. All Rights Reserved. Printed in the U.S.A. 5/08.

# Contents


**General Radio Operation . . . . . 1**
Notations Used in This Manual ..... 1
Your XTS 5000 Model I Radio ..... 2
Physical Features of the XTS 5000 Model I Radio ..... 3
Programmable Controls ..... 3
Backlight ..... 4
LED Indicators ..... 4
Alert Tones ..... 5
Standard Accessories ..... 8
Battery ..... 8
Antenna ..... 10
Belt Clip ..... 11
Universal Connector Cover ..... 12
Radio On and Off ..... 13
Turn the Radio On ..... 13
Turn the Radio Off ..... 13
Zones and Channels ..... 14
Select a Zone ..... 14
Select a Channel ..... 14
Mode Select Button ..... 15
Receive / Transmit ..... 16
Without Using Volume Set and Monitor Buttons ..... 16
Use the Preprogrammed Volume Set Button ..... 16
Use the Preprogrammed Monitor Button ..... 17
Conventional Mode Operation ..... 18

**Common Radio Features . . . . . 19**
Selectable Power Level ..... 19
Conventional Squelch Operation ..... 19
PL Defeat ..... 19
Time-out Timer ..... 20
Emergency ..... 20
Send an Emergency Alarm ..... 21
Send an Emergency Call ..... 22
Send a Silent Emergency Alarm ..... 23
Emergency Keep-Alive ..... 23
Lists ..... 24
View a Scan List ..... 24
Edit a Scan List ..... 25

Scan .....27
Turn Scan On or Off .....27
Delete a Nuisance Channel .....27
Conventional Scan Only .....28
Individual Calls .....29
Answer a Telephone Call (Trunking Only) .....29
Answer a Private Call (Trunking Only) .....29
Answer a Selective Call (ASTRO Conventional Only) .....30
Answer a Call Alert Page .....30
Select Repeater or Direct Operation .....31
Smart PTT (Conventional Only) .....32

**Special Radio Features . . . . . 33**
Secure Operations .....33
Select Secure Transmissions .....33
Select Clear Transmissions .....33
Managing Encryption .....34
Dynamic Regrouping (Trunking Only) .....36
Reprogram Request (ASTRO 25 Trunking Only) .....37
Select Enable / Disable .....37
Trunking System Controls .....38
Failsoft .....38
Out-of-Range .....38
Site Lock .....39
Site Change .....39
Outdoor Location (using GPS) .....40

**Helpful Tips . . . . . 41**
Radio Care .....41
Cleaning .....42
Handling .....43
Service .....43
Battery .....44
Battery Life .....44
Charging the Battery .....44
Battery Recycling and Disposal .....45
Antenna .....46
Radio Operating Frequencies .....46

**Accessories . . . . . 49**
Antennas . . . . . 49
Batteries and Battery Accessories . . . . . 49
Carry Accessories . . . . . 50
Belt Clips . . . . . 50
Belt Loops . . . . . 50
Carry Cases . . . . . 51
Chargers . . . . . 51
Surveillance Accessories . . . . . 52
Earpieces . . . . . 52
Headsets and Headset Accessories . . . . . 53
Radio Interface Modules for Ear Microphones . . . . . 53
Speaker, Remote Speaker and Public Safety Microphones . . . . . 54
CommPort Integrated Microphone/Receivers . . . . . 54
Switches . . . . . 55
Vehicular Adapters . . . . . 55
Accessories . . . . . 55

**Glossary . . . . . 57**

**Commercial Warranty . . . . . 61**

**Appendix: Maritime Radio Use in the VHF Frequency Range . . . . . 67**
Special Channel Assignments . . . . . 67
Emergency Channel . . . . . 67
Non-Commercial Call Channel . . . . . 68
Operating Frequency Requirements . . . . . 68

**Index . . . . . 71**

**Table 1: Channel Map**

Use the chart below to map the channels (C*x*) and zones (Z*x*) for your radio.

| | Z1 | Z2 | Z3 | Z4 | Z5 | Z6 |
|---|---|---|---|---|---|---|
| C1 | | | | | | |
| C2 | | | | | | |
| C3 | | | | | | |
| C4 | | | | | | |
| C5 | | | | | | |
| C6 | | | | | | |
| C7 | | | | | | |
| C8 | | | | | | |
| C9 | | | | | | |
| C10 | | | | | | |
| C11 | | | | | | |
| C12 | | | | | | |
| C13 | | | | | | |
| C14 | | | | | | |
| C15 | | | | | | |
| C16 | | | | | | |

# General Radio Operation

## Notations Used in This Manual

Throughout the text in this publication, you will notice the use of **WARNINGS**, **Cautions**, and **Notes**. These notations are used to emphasize that safety hazards exist, and the care that must be taken or observed.

**An operational procedure, practice, or condition, etc., which may result in injury or death if not carefully observed.**

An operational procedure, practice, or condition, etc., which may result in damage to the equipment if not carefully observed.

**Note:** An operational procedure, practice, or condition, etc., which is essential to emphasize.

The following special notations identify certain items:

| *Example* | *Description* |
|---|---|
| **Light** button | Buttons are shown in bold print. |

# Your XTS 5000 Model I Radio

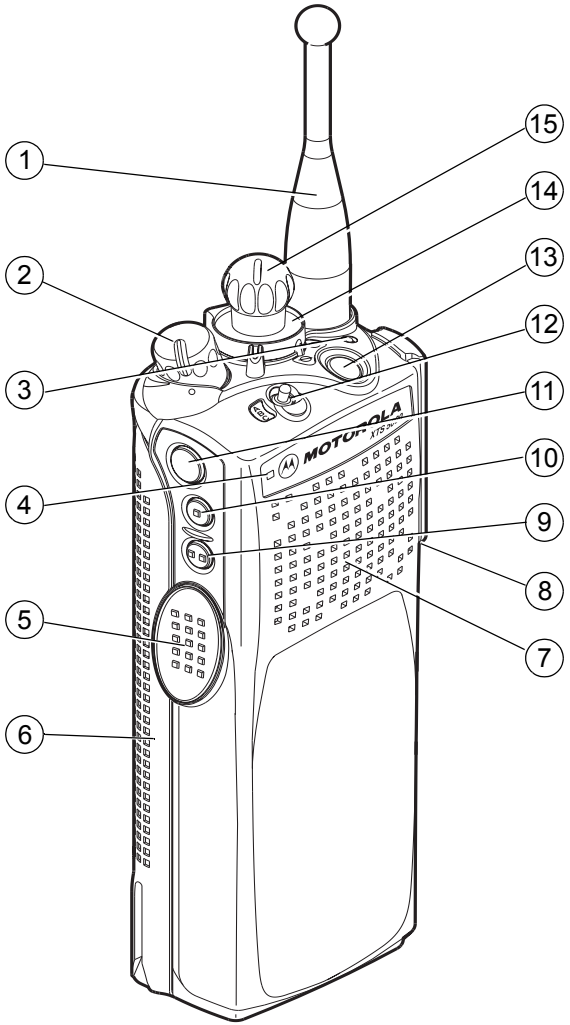

# Physical Features of the XTS 5000 Model I Radio

**Table 2: Physical Features**

| *No.* | *Feature* | *Page* | *No.* | *Feature* | *Page* |
|---|---|---|---|---|---|
| **1** | Antenna | 10 | **5** | PTT (Push-to-Talk) Button | |
| **2** | On/Off/Volume Control Knob | 13 | **6** | Battery | 8 |
| **3** | LED | 4 | **7** | Speaker | |
| **4** | Microphone | | **8** | Universal Connector | 12 |

# Programmable Controls

The following radio controls can be programmed to operate certain software-activated features.

| *No.* | *Feature* | *No.* | *Feature* |
|---|---|---|---|
| **9** | Side Button 2 | **13** | Top Button |
| **10** | Side Button 1 | **14** | 2-Position Concentric Switch |
| **11** | Top Side (Select) Button | **15** | 16-Position Select Knob |
| **12** | 3-Position A/B/C Switch | | |

The features that can be assigned to these controls by a qualified radio technician, and the pages where these features can be found are listed in Table 3 on page 4.

**Any references in this manual to controls that are "preprogrammed" mean that a qualified radio technician must use the radio's programming software to assign a feature to a control.**

**Table 3: Programmable Features**

| *Feature* | *Page* | *Feature* | *Page* | *Feature* | *Page* |
|---|---|---|---|---|---|
| Call Response | 29 | Nuisance Delete | 27 | Secure/Clear | 33 |
| Channel | 14 | PL Defeat | 19 | Site Lock/ Unlock | 39 |
| Dynamic Priority | 28 | Repeater/Direct | 31 | Site Search | 39 |
| Emergency | 20 | Reprogram Request | 37 | TX Power Level | 19 |
| Light | 4 | Scan On/Off | 27 | Volume Set | 16 |
| Monitor | 17 | Scan List Programming | 25 | Zone | 14 |

### Backlight

If poor light conditions make the channel numbers (around the **16-Position Select** knob) difficult to read, turn on the radio's backlights by pressing the preprogrammed **Light** button.

These lights will remain on for a preprogrammed time before they turn off automatically, or you can turn them off immediately by pressing the **Light** button again.

## LED Indicators

The LED on top of the radio indicates the radio's operating status:

**Table 4: LED Indicators**

| *LED Indicator* | *What it Means* |
|---|---|
| Red | Radio transmitting |
| Flashing red | • Channel busy, or<br>• Low battery (while transmitting) |
| Double flashing red | Receiving encrypted audio |
| Flashing green | Receiving an individual call |

## Alert Tones

An alert tone is a sound or group of sounds. Your radio uses alert tones to inform you of your radio's conditions. The following table lists these tones and when they occur.

**Table 5: Alert Tones**

| *You Hear* | *Tone Name* | *Heard* |
|---|---|---|
| **Short, Low-Pitched Tone** | Invalid Key-Press | when wrong key is pressed |
| | Radio Self-Test Fail | when radio fails its power-up self test |
| | Reject | when unauthorized request is made |
| | Time-Out Timer Warning | four seconds before time out |
| **Long, Low-Pitched Tone** | No ACK Received | when radio fails to receive an acknowledgment |
| | Time-Out Timer Timed Out | after time out |
| | Talk Prohibit/ PTT Inhibit | (when **PTT** button is pressed) transmissions are not allowed |
| | Out-of-Range | (when **PTT** button is pressed) the radio is out of range of the system |
| | Invalid Mode | when radio is on an unprogrammed channel |
| | Individual Call Warning Tone | when radio is in an individual call for greater than 6 seconds without any activity |
| **A Group of Low-Pitched Tones** | Busy | when system is busy |

**Table 5: Alert Tones (Continued)**

| *You Hear* | *Tone Name* | *Heard* |
|---|---|---|
| **Short, Medium-Pitched Tone** | Valid Key-Press | when correct key is pressed |
| | Radio Self-Test Pass | when radio passes its power-up self test |
| | Clear Voice | at beginning of a non-coded communication |
| | Priority Channel Received | when activity on a priority channel is received |
| | Emergency Alarm Entry | when entering the emergency state |
| | Central Echo | when central controller has received a request from a radio |
| **Long, Medium-Pitched Tone** | Volume Set | when volume is changed on a quiet channel |
| | Emergency Exit | when exiting the emergency state |
| **A Group of Medium-Pitched Tones** | Failsoft | when the trunking system fails |
| | Automatic Call Back | when voice channel is available from previous request |
| | Talk Permit | (when **PTT** button is pressed) verifying system accepting transmissions |
| | Keyfail | when encryption key has been lost |
| | Console Acknowledge | when status, emergency alarm, or reprogram request ACK is received |
| | Received Individual Call | when Call Alert or Private Call is received |
| | Call Alert Sent | when Call Alert is received by the target radio |
| **Short, High-Pitched Tone (Chirp)** | Low-Battery Chirp | when battery is below preset threshold value |

**Table 5: Alert Tones (Continued)**

| *You Hear* | *Tone Name* | *Heard* |
|---|---|---|
| **Short, Medium-Pitched Tone (Chirp)** | GPS RSM Low Battery Chirp | when this accessory battery is below preset threshold value |
| **Ringing** | Fast Ringing | when system is searching for target of Private Call |
| | Enhanced Call Sent | when waiting for target of Private Call to answer the call |
| | Phone Call Received | when a land-to-mobile phone call is received |
| **Gurgle** | Dynamic Regrouping | (when the **PTT** button is pressed) a dynamic ID has been received |

# Standard Accessories

## Battery

**To avoid a possible explosion:**

- **DO NOT replace the battery in any area labeled “hazardous atmosphere”.**
- **DO NOT discard batteries in a fire.**

### Charging the Battery

The Motorola-approved battery shipped with your radio is uncharged. Prior to using a new battery, charge it for a minimum of 16 hours to ensure optimum capacity and performance.

For a list of Motorola-authorized batteries available for use with your XTS 5000 radio, see “Batteries and Battery Accessories” on page 49.

**Note:** When charging a battery attached to a radio, turn the radio off to ensure a full charge.

#### *Battery Charger*

To charge the battery, place the battery, with or without the radio, in a Motorola-approved charger. The charger’s LED indicates the charging progress; see your charger’s user guide. For a list of chargers, see “Chargers” on page 51.

### Attach the Battery

**1** With the radio turned off, insert the top edge of the battery into the radio's frame as shown.



**2** Rotate the battery toward the radio and press down until the battery clicks into place.

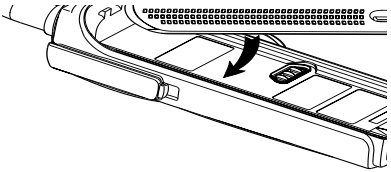

### Remove the Battery

**1** With the radio turned off, press the release button on the bottom of the battery until the battery releases from the radio.

**2** Remove the battery from the radio.

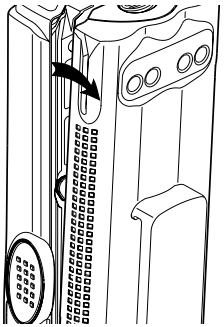

**Note:** If your radio is programmed with volatile-key retention, encryption keys will be retained for approximately 30 seconds after battery removal. Consult a qualified radio technician for details.

## Antenna

For information regarding available antennas, see page 46.

### Attach the Antenna

With the radio turned off, turn the antenna clockwise to attach it to the radio.

### Remove the Antenna

With the radio turned off, turn the antenna counter-clockwise to remove it from the radio.

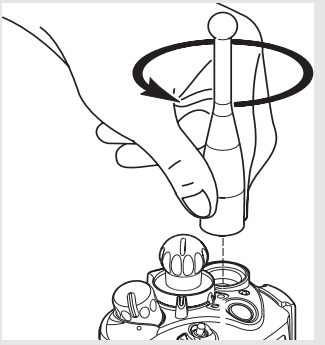

## Belt Clip

### Attach the Belt Clip

**1** Align the grooves of the belt clip with those of the battery.

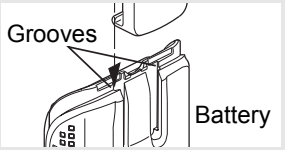


**2** Press the belt clip downward until you clear a click.

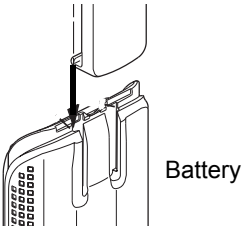


### Remove the Belt Clip

**1** Use a flat-bladed object to press the belt clip tab away from the battery.

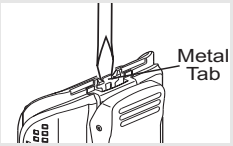


**2** Slide the belt clip upward to remove it.

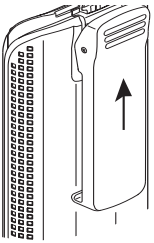

## Universal Connector Cover

The universal connector is located on the antenna side of the radio. It is used to connect accessories to the radio.

**Note:** To prevent damage to the connector, shield it with the connector cover when not in use.

### Remove the Connector Cover

**1** Insert a flat-bladed screwdriver into the area between the bottom of the cover and the slot below the connector.

**2** Hold the top of the cover with your thumb while you pry the bottom of the cover away from the radio with the screwdriver.

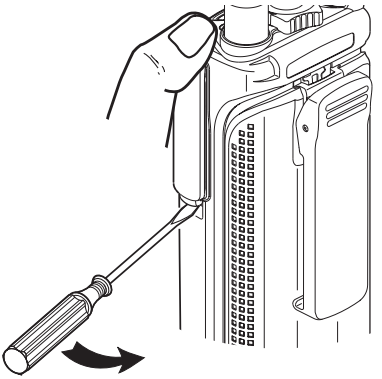

### Attach the Connector Cover

**1** Insert the hooked end of the cover into the slot above the connector. Press downward on the cover's top to seat it in the slot.

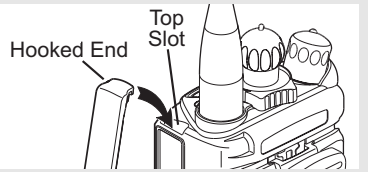


**2** Rub the ball of your thumb from the top to the bottom of the cover while applying pressure towards the radio. This should flex the cover and snap it into place.

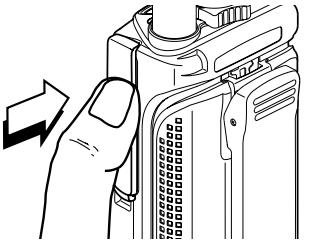

# Radio On and Off

## Turn the Radio On

Turn the **On/Off/Volume Control** knob clockwise. The radio does a self test.

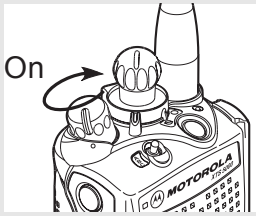


**Note:** If the self test is successful, you hear a medium-pitched tone.

- Medium-pitched tone

If the self test is not successful, you hear a low-pitched tone.

- Low-pitched tone

Turn off the radio, check the battery, and turn the radio on. If the radio fails the power-up test again, contact a qualified radio technician.

## Turn the Radio Off

Turn the **On/Off/Volume Control** knob counterclockwise until it clicks.

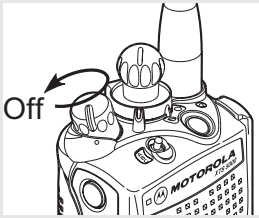

# Zones and Channels

A zone is a grouping of channels. A channel is a group of radio characteristics, such as transmit/receive frequency pairs.

Before you use your radio to receive or send messages, you should select the zone and channel.

## Select a Zone

| | | |
|---|---|---|
| **1** | If a control on your radio has been preprogrammed as the **Zone** switch, move the **Zone** switch to the position for the zone you want. | |
| **2** | If the zone you selected is unprogrammed, you hear a long, medium-pitched tone. Repeat step **1**. | • Long, medium-pitched tone |

## Select a Channel

| | | |
|---|---|---|
| **1** | When the zone you want has been selected, turn the preprogrammed **16-Position Select** knob to the desired channel. | 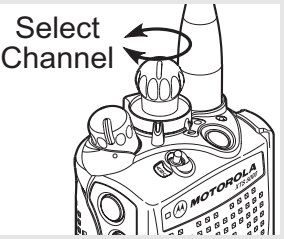 |
| **2** | If the channel you selected is unprogrammed, you hear a long, medium-pitched tone. Repeat step **1**. | • Long, medium-pitched tone |

## Mode Select Button

This feature lets you program the current zone and channel to a **Mode Select** button with a long press on the **Mode Select** button. After the buttons are programmed, you can return to the pre-programmed zone and channel with a short press on the programmed **Mode Select** button.

The buttons that are assigned for this feature are labeled in the following picture.

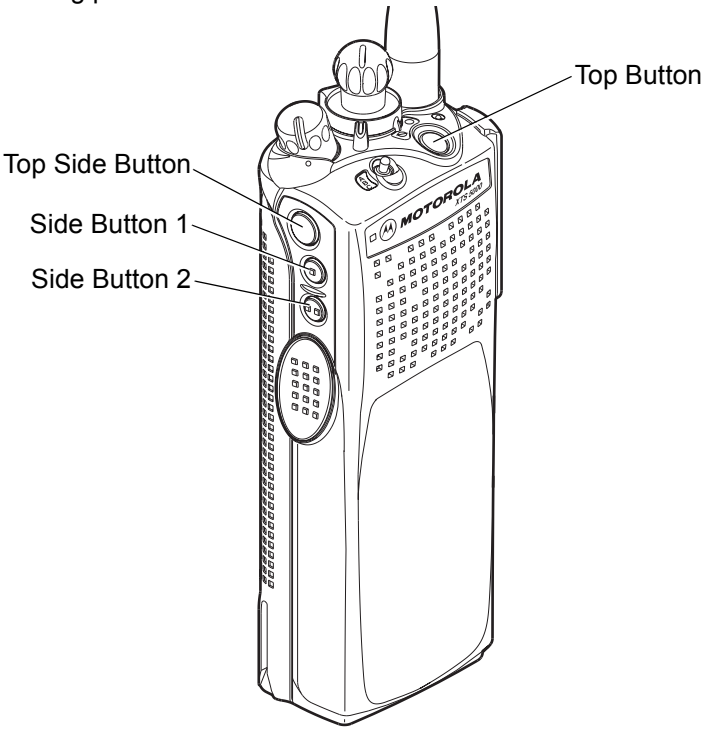

# Receive / Transmit

Radio users who switch from analog to digital radios often assume that the lack of static on a digital channel is an indication that the radio is not working properly. This is not the case. Digital technology quiets the transmission by removing the “noise” from the signal and allowing only the clear voice or data information to be heard.

This section emphasizes the importance of knowing how to monitor a channel for traffic before keying up to send a transmission.

## Without Using Volume Set and Monitor Buttons

| | | |
|---|---|---|
| **1** | Turn the radio on and select the desired zone and channel. | |
| **2** | Listen for a transmission. | |
| **3** | Adjust the **Volume Control** knob if necessary. | |
| **4** | Press and hold the **PTT** button to transmit. The LED lights RED while transmitting. | |
| **5** | Release the **PTT** button to receive (listen). | |

## Use the Preprogrammed Volume Set Button

| | |
|---|---|
| **1** | Turn the radio on and select the desired zone and channel. |
| **2** | Press and hold the **Volume Set** button to hear the volume set tone. |

| | | |
|---|---|---|
| **3** | Adjust the **Volume Control** knob if necessary. | 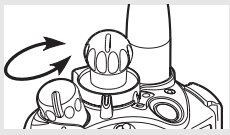 |
| **4** | Release the **Volume Set** button. | |
| **5** | Press and hold the **PTT** button to transmit. The LED lights RED while transmitting. | |
| **6** | Release the **PTT** button to receive (listen). | |

## Use the Preprogrammed Monitor Button

| | | |
|---|---|---|
| **1** | Turn the radio on and select the desired zone and channel. | |
| **2** | Press the **Monitor** button and listen for activity. (See the following **Conventional Mode Operation**.) | |
| **3** | Adjust the **Volume Control** knob if necessary. | 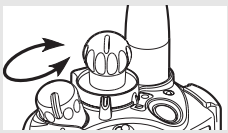 |
| **4** | Press and hold the **PTT** button to transmit. The LED lights RED while transmitting. | |
| **5** | Release the **PTT** button to receive (listen). | |

## Conventional Mode Operation

Your radio may be programmed to receive Private-Line® (PL) calls.

| | |
|---|---|
| **1** | Momentarily press the **Monitor** button to listen for activity. |
| **2** | Press and hold the **Monitor** button to set continuous monitor operation. (The duration of the button press is programmable.) |
| **3** | Press the **Monitor** button again, or the **PTT** button, to return to the original squelch setting. |

**Note:** If you try to transmit on a receive-only channel, you will hear an invalid tone until you release the **PTT** button.

# Common Radio Features

## Selectable Power Level

This feature lets you select the power level at which your radio will transmit. This feature must be preprogrammed by a qualified radio technician.

- Select Low for a shorter transmitting distance and to conserve power.
- Select High for a longer transmitting distance.

Place the preprogrammed **TX Power Level** switch in the **High Power** or **Low Power** position.

## Conventional Squelch Operation

Tone Private Line (PL), Digital Private-Line (DPL), and carrier squelch can be available (preprogrammed) per channel.

| *When in* | *This condition occurs* |
|---|---|
| Carrier squelch | You hear all traffic on a channel. |
| PL or DPL | The radio responds only to your messages. |

## PL Defeat

With this feature, you can override any coded squelch (DPL or PL) that might be preprogrammed to a channel.

Place the preprogrammed **PL Defeat** switch in the **PL Defeat** position. You can now hear any activity on the channel. The radio is muted if no activity is present.

## Time-out Timer

The time-out timer turns off your radio's transmitter. The timer is set for 60 seconds at shipment, but it can be programmed from 0 to 7.75 minutes (465 seconds) by a qualified radio technician.

| | | |
|---|---|---|
| **1** | Hold down the **PTT** button longer than the programmed time. You will hear a short, low-pitched warning tone, the transmission will cut-off, and the LED will go out until you release the **PTT**. | • Short warning tone<br>• Transmission is cut-off<br>• LED goes out |
| **2** | Release the **PTT** button. | • LED re-lights<br>• Timer resets |
| **3** | Press the **PTT** to re-transmit. The time-out timer restarts. | • Timer restarts<br>• LED is red |

## Emergency

If the top (orange) button is programmed to send an emergency signal, then this signal overrides any other communication over the selected channel.

Your radio can be programmed for the following:

- Emergency Alarm
- Emergency Call
- Emergency Alarm with Emergency Call
- Silent Emergency Alarm

Consult a qualified radio technician for emergency programming of your radio.

## Send an Emergency Alarm

An emergency alarm sends a data transmission to the dispatcher, which identifies the radio sending the emergency.

| | | |
|---|---|---|
| **1** | With your radio turned on, press the **Emergency** button. The red LED lights, and you hear a short, medium-pitched tone. | • Red LED<br>• Short tone |

**Note:** To exit emergency at any time, press and hold the **Emergency** button for about a second.

| | | |
|---|---|---|
| **2** | When you receive the dispatcher's acknowledgment, you hear four tones, the alarm ends, and the radio exits the emergency mode. | • Four tones<br>• Alarm ends<br>• Radio exits emergency |
| | If no acknowledgment is received, the alarm ends and the radio exits the emergency mode. | • Alarm ends<br>• Radio exits emergency |

**Note:** **For Emergency Alarm with Emergency Call:** The radio enters the Emergency Call state either after it receives the dispatcher's acknowledgment, or if you press the **PTT** button while in Emergency Alarm. Go to step 2 of "Send an Emergency Call" on page 22.

## Send an Emergency Call

This type of dispatch gives your radio priority access on a channel.

The radio operates in the normal dispatch manner while in Emergency Call, except, if enabled, it will return to one of the following:

- Tactical/Non-Revert — You talk on the channel you selected before you entered the emergency state.
- Non-Tactical/Revert — You talk on a preprogrammed emergency channel. The emergency alarm is sent on this same channel.

| | | |
|---|---|---|
| **1** | With your radio turned on, press the **Emergency** button. A short, medium-pitched tone sounds. | • Short tone |
| **Note:** | To exit emergency at any time, press and hold the **Emergency** button. | |
| **2** | Press and hold the **PTT** button and announce your emergency into the microphone. | |
| **3** | Release the **PTT** button to end the transmission and wait for a response from the dispatcher. | |
| **4** | Press and hold the **Emergency** button for about a second to exit emergency. | |

## Send a Silent Emergency Alarm

| | | |
|---|---|---|
| **1** | With your radio turned on, press the **Emergency** button. The LED does not light, and you hear no tones. | • LED does not light<br>• No tones |
| **Note:** | To exit emergency at any time, press and hold the **Emergency** button for about a second. | |
| **2** | The silent emergency state continues until you:<br><br>Press and hold the **Emergency** button for about a second to exit the emergency state.<br><br>**OR**<br><br>Press and release the **PTT** button to exit silent emergency and enter regular dispatch or emergency call. | • Press and hold **Emergency** button<br><br>**OR**<br><br>• Press and release the **PTT** button |

**Note:** For ALL Emergency signals, when changing channels:

- If the new channel is also programmed for Emergency, you can change channels while in Emergency operation. The emergency alarm or call continues on the new channel.
- If the new channel is NOT programmed for Emergency, you hear an invalid tone until you exit Emergency or change to a channel programmed for emergency.

## Emergency Keep-Alive

With Emergency Keep-Alive enabled, if the radio is in the Emergency state, you cannot turn off the radio by using the **On/Off Volume Control** knob.

With Keep-Alive, the radio will only exit the Emergency state using one of the ways mentioned in the previous sections (Emergency Alarm, Silent Emergency Alarm, or Emergency Call).

# Lists

## View a Scan List

You can view the status of members of **one** preselected scan list.

1. Select the zone/channel whose scan status you wish to view (see “Zones and Channels” on page 14).
2. Move the preprogrammed **Scan List Programming** switch to the “scan list programming” position.

   The LED’s color and condition indicates the status of the selected zone/channel.

   - Steady Green = a non-priority member of the scan list.
   - Steady Red = the *Priority 2* member of the scan list.
   - Flashing Red = the *Priority 1* member of the scan list.
   - Unlighted = not a member of the scan list.
3. Select additional zones/ channels as desired to view their scan status.
4. When finished, move the **Scan List Programming** switch away from the “scan list programming” position.

## Edit a Scan List

You can add or change the priority status of members in **one** preselected scan list.

**1** Select the zone/channel you wish to add or whose scan priority status you wish to change (see “Zones and Channels” on page 14).

**2** Move the preprogrammed **Scan List Programming** switch to the **Scan List Programming** position.

The LED’s color and condition indicates the status of the selected zone/channel.

- Steady Green = a non-priority member of the scan list.
- Steady Red = the *Priority 2* member of the scan list.
- Flashing Red = the *Priority 1* member of the scan list. You will hear all traffic on the Priority 1 channel, regardless of traffic on non-priority channels.
- Unlighted = not a member of the scan list.

**Note:** You cannot delete a priority channel from a scan list.

**3** Press the **Select** button (Top Side button) once to add the selected zone/channel to the scan list.

**AND/OR**

Press the **Select** button (Top Side button) one or more times to find the desired scan status. The last scan status shown is the one that is saved.

| | |
|---|---|
| **Note:** | In **Scan List Programming** mode, the Top Side button automatically becomes the **Select** button. This is only true while in **Scan List Programming** mode.<br>The maximum number of members for a conventional scan list is 15. |
| **4** | Select additional zones/ channels as desired to add them or to change their scan status. |
| **5** | When finished, move the **Scan List Programming** switch away from the **Scan List Programming** position. |

# Scan

The scan feature allows you to monitor traffic on different channels by scanning a preprogrammed list of channels. Your radio can have up to 32 different scan lists. These lists must be preprogrammed by a qualified radio technician.

- To view your radio's scan lists, see "View a Scan List" on page 24.
- To change one of your radio's scan lists, see "Edit a Scan List" on page 25.

## Turn Scan On or Off

Place the **Scan** switch in the **Scan On** or **Scan Off** position.

## Delete a Nuisance Channel

When the radio scans to a channel that you do not wish to hear (nuisance channel), you can temporarily delete the channel from the scan list.

**1** When the radio is locked onto the channel to be deleted, press the preprogrammed **Nuisance Delete** button.

Repeat this step to delete more channels.

**Note:** You cannot delete priority channels or the designated transmit channel.

**2** The radio continues scanning the remaining channels in the list. To resume scanning the deleted channel, change channels or turn scan off and then back on again.

## Conventional Scan Only

### Make a Dynamic Priority Change

While the radio is scanning, the dynamic priority change feature lets you *temporarily* change any channel in a scan list (except the Priority 1 channel) to the Priority 2 channel. The replaced Priority 2 channel becomes a non-priority channel. This change remains in effect until scan is turned off, then scanning reverts back to the preprogrammed state.

**1** When the radio is locked onto the channel to be designated as Priority 2, press the preprogrammed **Dynamic Priority** button.

**Note:** The Priority 1 channel cannot be changed to Priority 2.

**2** The radio continues scanning the remaining channels in the list. To resume scanning the preprogrammed Priority 2 channel, you must leave and re-enter scan operation.

# Individual Calls

You can answer individual calls made to your radio. Use the preprogrammed **Call Response** button to answer a call.

## Answer a Telephone Call (Trunking Only)

Use your radio to answer calls similar to standard phone calls. A landline phone can be used to call a radio. Use the preprogrammed **Call Response** button to answer a call.

| | | |
|---|---|---|
| **1** | When a phone call is received, you hear a telephone-type ringing, and the LED flashes GREEN. | • Telephone-type ringing<br>• Flashing GREEN LED |
| **2** | Press the **Call Response** button within 20 seconds after the call indicators begin. | |
| **3** | Press and hold the **PTT** button to talk; release it to listen. | |
| **4** | To hang up, press the **Call Response** button again. | |

## Answer a Private Call (Trunking Only)

These one-to-one calls between two radios are not heard by others in the current talkgroup. The calling radio automatically verifies that the receiving radio is active on the system. Use the preprogrammed **Call Response** button to answer a call.

| | | |
|---|---|---|
| **1** | When a private call is received, you hear two alert tones, and the LED flashes GREEN. | • Two tones<br>• Flashing GREEN LED |
| **2** | Press the **Call Response** button within 20 seconds. | |

| | | |
|---|---|---|
| **3** | Press and hold the **PTT** button to talk; release it to listen. | |
| **4** | To hang up, press the **Call Response** button again. | |

## Answer a Selective Call (ASTRO Conventional Only)

A Selective Call is used to call a select individual. It is intended to provide privacy and to eliminate the annoyance of having to listen to conversations that are of no interest to you.

| | | |
|---|---|---|
| **1** | When a Selective Call is received, you hear two alert tones and the LED flashes GREEN. | • Two tones<br>• Flashing GREEN LED |
| **2** | Press and hold the **PTT** button to talk; release it to listen. | |
| **3** | Press to hang up. | |

## Answer a Call Alert Page

Call Alert allows your radio to work like a pager.

| | | |
|---|---|---|
| **1** | When a Call Alert page is received, you hear four repeating alert tones, and the LED flashes GREEN. | • Four repeating alert tones<br>• Flashing GREEN LED |
| **2** | Press and hold the **PTT** button to talk; release it to listen. Your conversation is heard by the entire talkgroup. | |

## Select Repeater or Direct Operation

- REPEATER operation = increases radio range by connecting radios through a repeater or repeaters. Transmit and receive frequencies are different.
- DIRECT (or Talkaround) operation = You bypass the repeater and connect directly to another radio. Transmit and receive frequencies are the same.

Place the **Repeater/Direct** switch in the **Repeater** or **Direct** position.

## Smart PTT (Conventional Only)

Smart PTT is a per-channel, programmable feature used in conventional radio systems to keep radio users from talking over other radio conversations.

When smart PTT is enabled in your radio, you will not be able to transmit on an active channel. If you try to transmit (press the **PTT** button) on an active smart-PTT channel, you will hear an alert tone, and the transmission will be inhibited. The LED will also blink red to indicate that the channel is busy.

Three radio-wide variations of smart PTT are available:

| | |
|---|---|
| Transmit Inhibit on Busy Channel with Carrier | You cannot transmit if any activity is detected on the channel. |
| Transmit Inhibit on Busy Channel with Wrong Squelch Code | You cannot transmit on an active channel with a squelch code or (if secure-equipped) encryption key other than your own. If the PL code is the same as yours, the transmission will not be prevented. |
| Quick-Key Override | This feature can work in conjunction with either of the two above variations. You can override the transmit-inhibit state by quick-keying the radio. in other words, two **PTT** Button presses within the preprogrammed time limit. |

# Special Radio Features

## Secure Operations

Secure radio operation provides the highest commercially available level of voice security on both trunked and conventional channels. Unlike other forms of security, Motorola digital encryption provides signaling that makes it virtually impossible for others to decode any part of an encrypted message.

**Note:** Secure operation is not available in trunked analog modes.

### Select Secure Transmissions

Turn the preprogrammed **Secure/Clear** switch to the secure position (⊘).

**Note:** *If the selected channel is programmed for clear-only operation* — when you press the **PTT** button, you hear an invalid mode tone.

The radio will not transmit until you set the **Secure/Clear** switch to the clear position (○).

### Select Clear Transmissions

Turn the preprogrammed **Secure/Clear** switch to the clear position (○).

**Note:** *If the selected channel is programmed for secure-only operation* — when you press the **PTT** button, you hear an invalid mode tone.

The radio will not transmit until you set the **Secure/Clear** switch to the secure position (⊘).

## Managing Encryption

### Key Loading

Refer to the key-variable loader (KVL) manual for equipment connections and setup.

| | |
|---|---|
| **1** | Attach the KVL to your radio. When it is attached, all radio functions, except for power down, backlight, and volume, will be locked out. |
| **2** | Press the **PTT** button on the KVL. This will load the encryption keys into your radio. When the key has been loaded successfully, the radio will sound a short tone for single-key radios; for multikey radios, an alternating tone will be heard. |

### Multikey

The multikey feature allows your radio to be equipped with as many as 48 different encryption keys and supports the DES-OFB algorithm.

- **Conventional Multikey** — The encryption keys can be tied (strapped), on a one-per-channel basis, through radio service software. In addition, you can have operator-selectable keys, operator-selectable keysets, and operator-selectable key erasure. If talkgroups are enabled in conventional, then the encryption keys are strapped to the talkgroups.
- **Trunked Multikey** — If you use your radio for both conventional and trunked applications, you will have to strap your encryption keys for trunking on a per-talkgroup or announcement-group basis. In addition, you may strap a different key to other features, such as dynamic regrouping, failsoft, or emergency talkgroup. You can have operator-selectable key erasure.

**Key Zeroization**

**Note:** This is the method used for erasing the single key in radios with the single-key option, and for erasing all keys in radios with the multikey option.

With the radio on, press and hold the **Top Side** button; while holding this button down, press the **Top** button. When the keys have been erased, you will hear a valid key-press tone.

**Note:** **DO NOT** press the **Top** button before pressing the **Top Side** button, unless you are in an emergency situation; this would send an emergency alarm.

## Dynamic Regrouping (Trunking Only)

The dynamic regrouping feature lets the dispatcher temporarily reassign selected radios to a single special channel so they can communicate with each other. This feature is typically used during special operations and is enabled by a qualified radio technician. You will not notice whether your radio has this feature enabled until a dynamic regrouping command is sent by the dispatcher.

**Note:** If you try to access a zone or channel that has been reserved by the dispatcher as a dynamically regrouped mode for other users, you will hear an invalid tone.

When your radio is dynamically regrouped, it automatically switches to the dynamically regrouped channel. You see the dynamically regrouped channel's name, and hear a "gurgle" tone.

Press the **PTT** button to talk; release it to listen.

When the dispatcher cancels dynamic regrouping, the radio automatically returns to the zone and channel that you were using before the radio was dynamically regrouped.

## Reprogram Request (ASTRO 25 Trunking Only)

This feature lets you notify the dispatcher that you want a new dynamic regrouping assignment.

| | | |
|---|---|---|
| **1** | Press the preprogrammed **Reprogram Request** button. The reprogram request is sent to the dispatcher. | • Reprogram request sent |
| **2** | If you hear *one beep,* press the **PTT** button to send the reprogram request again.<br>**OR** | • One beep |
| | If you hear *five beeps*, the reprogram request was acknowledged by the dispatcher.<br>**OR** | • Five beeps |
| | If the dispatcher does not acknowledge the reprogram request within six seconds, you hear a low-pitched alert tone.<br>Try again. | • Alert tone |

## Select Enable / Disable

The dispatcher can classify regrouped radios into either select enabled or select disabled.

- Select-enabled radios are free to change to any available channel, including the dynamic-regrouping channel, once the user has selected the dynamic-regrouping position.
- Select-disabled radios cannot change channels. The dispatcher has forced the radio to remain on the dynamic-regrouping channel.

The Scan or Private Call feature cannot be selected while your radio is select disabled.

# Trunking System Controls

## Failsoft

The failsoft system ensures continuous radio communications during a trunked system failure. If a trunking system fails completely, the radio goes into failsoft operation and automatically switches to its failsoft channel.

During failsoft operation:

| | |
|---|---|
| Your radio transmits and receives in conventional operation on a predetermined frequency. | |
| You hear a medium-pitched tone every 10 seconds | • A medium-pitched tone |

When the trunking system returns to normal operation, your radio automatically leaves failsoft operation and returns to trunked operation.

## Out-of-Range

If you go out of the range of the system and can no longer lock onto a control channel, you hear a low-pitched tone.

| | |
|---|---|
| Your radio remains in this out-of-range condition until it locks onto a control channel, locks onto a failsoft channel, or is turned off. | • Locks onto control channel<br>• Locks onto failsoft channel<br>• Turned off. |

## Site Lock

This feature allows your radio to lock onto a specific site and not roam among wide-area talkgroup sites. This feature should be used with caution, since it inhibits roaming to another site in a wide-area system.

### Lock or Unlock a Site

Press the preprogrammed **Site Lock/Unlock** button. The site lock state changes.

## Site Change

You can manually force your radio to change to a new site.

### Change the Current Site

- Press and hold down the preprogrammed **Site Search** button. You hear a tone while the radio scans for a new site.
- Tone sounds
- When the radio finds a new site, the tone stops.
- Tone stops

## Outdoor Location (using GPS)

The Outdoor Location (using GPS) feature allows radio users using the model with display to determine their current location using a location menu. For non display model, radio location may be reported over-the-air but unknown to users.

This feature is only available when a location enabled accessory such as the GPS Remote Speaker Microphone (RSM) is attached to the radio.

# Helpful Tips

## Radio Care

Caution

- The XTS 5000 radio casting has two vent ports that allow for pressure equalization in the radio. Never poke these vents with any objects, such as needles, tweezers, or screwdrivers. This could create leak paths into the radio and the radio's submergibility will be lost.
- (**For XTS 5000 R Radios Only**) The XTS 5000 R radio is designed to be submerged to a maximum depth of 6 feet, with a maximum submersion time of 4 hours. Exceeding either maximum limit may result in damage to the radio.
- (**For XTS 5000 R Radios Only**) Elastomer technology materials used for seals in rugged portable radios can age with time and environmental exposure. Therefore, Motorola recommends that rugged radios be checked annually as a preventive measure in order to assure the watertight integrity of the radio. Motorola details the disassembly, test, and reassembly procedures along with necessary test equipment needed to inspect, maintain and troubleshoot radio seals in the radio's service manual.
- If the radio battery contact area has been submerged in water, dry and clean the radio battery contacts before attaching a battery to the radio. Otherwise, the water could short-circuit the radio.

Caution

- If the radio has been submerged in water, shake the radio well so that any water that may be trapped inside the speaker grille and microphone port can be removed. Otherwise, the water will decrease the audio quality of the radio.
- Do not disassemble the radio. This could damage radio seals and result in leak paths into the radio. Any radio maintenance should be performed only by a qualified radio technician.

## Cleaning

To clean the external surfaces of your radio:

1 Combine one teaspoon of mild dishwashing detergent to one gallon of water (0.5% solution).

2 Apply the solution sparingly with a stiff, non-metallic, short-bristled brush, making sure excess detergent does not get entrapped near the connectors, controls or crevices. Dry the radio thoroughly with a soft, lint-free cloth.

3 Clean battery contacts with a lint-free cloth to remove dirt or grease.

Caution

**Do not use solvents to clean your radio. Spirits may permanently damage the radio housing.**

**Do not submerge the radio in the detergent solution.**

### Handling

- Do not pound, drop, or throw the radio unnecessarily. Never carry the radio by the antenna.
- Avoid subjecting the radio to an excess of liquids. Do not submerge the radio unless it is a ruggedized, XTS 5000 R model.
- Avoid subjecting the radio to corrosives, solvents or spirits.
- Do not disassemble the radio.
- Keep the accessory-connector cover in place until ready to use the connector. Replace the cover immediately once the accessory has been disconnected.

## Service

Proper repair and maintenance procedures will assure efficient operation and long life for this product. A Motorola maintenance agreement will provide expert service to keep this and all other communication equipment in perfect operating condition. A nationwide service organization is provided by Motorola to support maintenance services. Through its maintenance and installation program, Motorola makes available the finest service to those desiring reliable, continuous communications on a contract basis. For a contract service agreement, please contact your nearest Motorola service or sales representative, or an authorized Motorola dealer.

Express Service Plus (ESP) is an optional extended service coverage plan, which provides for the repair of this product for an additional period of either one or two years beyond the normal expiration date of the standard warranty. For more information about ESP, contact the Motorola Radio Support Center at 3761 South Central Avenue, Rockford, IL 61102 (800) 227-6772 / (847)725-4200.

# Battery

## Battery Life

Battery life is determined by several factors. Among the more critical are the regular overcharge of batteries and the average depth of discharge with each cycle. Typically, the greater the overcharge and the deeper the average discharge, the fewer cycles a battery will last. For example, a battery which is overcharged and discharged 100% several times a day, will last fewer cycles than a battery that receives less of an overcharge and is discharged to 50% per day. Further, a battery which receives minimal overcharging and averages only 25% discharge, will last even longer.

## Charging the Battery

Motorola batteries are designed specifically to be used with a Motorola charger and vice-versa. Charging in non-Motorola equipment may lead to battery damage and void the battery warranty. Motorola-authorized battery chargers may not charge batteries other than the ones listed on page 49.

The battery should be at about 77°F (25°C) (room temperature), whenever possible. Charging a cold battery (below 50° F [10°C]) may result in leakage of electrolyte and ultimately in failure of the battery. Charging a hot battery (above 95°F [35°C]) results in reduced discharge capacity, affecting the performance of the radio. Motorola rapid-rate battery chargers contain a temperature-sensing circuit to ensure that batteries are charged within the temperature limits stated above.

### Battery Charge Status

Your radio can indicate your battery's charge status through LED and sounds.

When your battery is low:

- you see the LED flash red when the **PTT** button is pressed
- you hear a low-battery "chirp" (short, high-pitched tone)

## Battery Recycling and Disposal

Nickel-cadmium (NiCd) rechargeable batteries can be recycled. However, recycling facilities may not be available in all areas. Under various U.S. state laws and the laws of several other countries, NiCd batteries must be recycled and cannot be disposed of in landfills or incinerators. Contact your local waste management agency for specific requirements and information in your area.

Motorola fully endorses and encourages the recycling of NiCd batteries. In the U.S. and Canada, Motorola participates in the nationwide Rechargeable Battery Recycling Corporation (RBRC) program for NiCd battery collection and recycling. Many retailers and dealers participate in this program.

For the location of the drop-off facility closest to you, access RBRC's Internet web site at www.rbrc.com or call 1-800-8-BATTERY. This internet site and telephone number also provide other useful information concerning recycling options for consumers, businesses, and governmental agencies.

# Antenna

## Radio Operating Frequencies

Before installing the antenna, make sure it matches your radio's operating frequency. Antennas are frequency sensitive and are color coded according to their frequency range. The color code indicator is located in the center of the antenna's base.



Color Code

The following antenna types are compatible with your radio:

| *Antenna Type* | *Approx. Length* | | *Insulator Color Code* | *Frequency Range* | *Antenna Kit No.* |
|---|---|---|---|---|---|
| | *in.* | *mm* | | | |
| VHF Helical | 8 | 203 | RED | 136-174 MHz | NAD6563 |
| VHF Helical | 7.6 | 193 | YELLOW | 136-150.8 MHz | NAD6566 |
| VHF Helical | 7 | 178 | BLACK | 150.8-162 MHz | NAD6567 |
| VHF Helical | 6.5 | 165 | BLUE | 162-174 MHz | NAD6568 |
| UHF Helical | 3.4 | 88 | RED | 380-435 MHz | NAE6546 |
| UHF Helical | 3.2 | 80 | GREEN | 435-470 MHz | NAE6547 |
| UHF Helical | 3.1 | 79 | BLACK | 470-512 MHz | NAE6548 |
| UHF Whip, Wideband | 5.2 | 130 | GRAY | 380-520 MHz | NAE6549 |
| 800 MHz Whip, Halfwave | 7 | 178 | RED | 806-870 MHz | NAF5037 |

| *Antenna Type* | *Approx. Length* | | *Insulator Color Code* | *Frequency Range* | *Antenna Kit No.* |
|---|---|---|---|---|---|
| | *in.* | *mm* | | | |
| 800 MHz Stubby, Quarterwave | 3.4 | 86 | WHITE | 806-870 MHz | NAF5042 |
| 700/800 MHz Whip | 7 | 178 | GREEN | 764-870 MHz | NAF5080 |

# Notes

# Accessories

Motorola provides the following approved accessories to improve the productivity of your XTS 5000 portable two-way radio.

## Antennas

| | |
|---|---|
| NAD6563 | 136-174 MHz helical |
| NAD6566 | 136-150.8 MHz helical |
| NAD6567 | 150.8-162 MHz helical |
| NAD6568 | 162-174 MHz helical |
| NAE6546 | 380-435 MHz helical |
| NAE6547 | 435-470 MHz helical |
| NAE6548 | 470-512 MHz helical |
| NAE6549 | 380-520 MHz wideband whip |
| NAF5037 | 800 MHz whip, halfwave (806-870 MHz) |
| NAF5042 | 800 MHz stubby, quarterwave (806-870 MHz) |
| NAF5080 | 700/800 MHz whip (764-870 MHz) |

## Batteries and Battery Accessories

| | |
|---|---|
| HNN9031 | 1525 mAh NiCd impres™ (non-FM/CSA) |
| HNN9032 | 1525 mAh NiCd impres™ Intrinsically Safe (FM/CSA) |
| NNTN4435 | 1800 mAh NiMH impres™ (non-FM/CSA) |
| NNTN4436 | 1750 mAh NiMH impres™ Intrinsically Safe (FM/CSA) |
| NNTN4437 | 1750 mAh NiMH impres™ Intrinsically Safe (FM/CSA) Ruggedized |
| NTN9862 | 2000 mAh impres™ Li Ion |
| NTN8294 | 1525 mAh NiCd (non-FM/CSA) |
| NTN8295 | 1525 mAh NiCd Intrinsically Safe (FM/CSA) |

| | |
|---|---|
| NTN8297 | 1525 mAh NiCd Intrinsically Safe (FM/CSA) Ruggedized |
| NTN8299 | 1700 mAh NiMH Intrinsically Safe (FM/CSA) |
| NTN8610 | 1650 mAh Li Ion |
| NTN8923 | 1800 mAh NiMH ultra-capacity (non FM/CSA) |
| RNN4006 | 3000 mAh NiMH (non FM/CSA) |
| RNN4007 | 3000 mAh NiMH Intrinsically Safe (FM/CSA) |
| NTN9177 | Battery holder, clamshell, black (requires 12AA alkaline batteries) |
| NTN9183 | Battery holder, clamshell, orange (requires 12AA alkaline batteries) |

# Carry Accessories

## Belt Clips

| | |
|---|---|
| NTN8266 | Belt clip kit, 2.25", plastic (compatible with clamshell batteries) |
| NTN8460 | Public Safety belt clip, 3.0”, metal (VHF use only) |
| NTN9179 | Combo, high-activity D clip (NTN9212) and high-activity belt loop (NTN9213) |
| NTN9212 | D clip, high-activity, swivel (for use with NTN9213) |

## Belt Loops

| | |
|---|---|
| NTN8039 | Swivel belt loop, 2.5" (for use only with the high-activity leather swivel snap carry cases) |
| NTN8040 | Belt loop, swivel, leather, 3.0", high-activity (for use only with the high-activity leather swivel snap carry cases) |
| NTN8383 | T-strap, plain, action snaps |
| NTN9213 | Belt loop, 2.5", high-activity, D clip |

## Carry Cases

| | |
|---|---|
| NTN8380 | Case, hard leather high-activity (includes swivel belt loop and T-strap), 2.5" belt loop, for Model II and III radios |
| NTN8381 | Case, hard leather high-activity (includes swivel belt loop and T-strap), 3.0" belt loop, for Model II and III radios |
| NTN8382 | Case (includes belt loop and T-strap), for Model II and III radios |
| NTN8385 | Case, hard leather high-activity (includes swivel belt loop and T-strap), 2.5" belt loop, for Model I radio |
| NTN8386 | Case, hard leather high-activity (includes swivel belt loop and T-strap), 3.0" belt loop, for Model I radio |
| NTN8387 | Leather case (includes belt loop and T-strap), for Model I radio |
| NTN8725 | Nylon carry case with belt loop and T-strap |
| NTN9184 | Leather case (includes belt loop), for clamshell battery |

# Chargers

| | |
|---|---|
| NTN1667 | Single-unit, tri-chemistry, rapid rate, 110 V |
| NTN1668 | Single-unit, tri-chemistry, rapid rate, 230 V (2-prong Euro plug) |
| NTN1669 | Single-unit, tri-chemistry, rapid rate, 230 V (3-prong UK plug) |
| WPLN4108 | impres™ multi-unit, tri-chemistry, 110 V (US, NA plug) |
| WPLN4111 | impres™ single-unit, tri-chemistry, 110 V |
| WPLN4130 | impres™ multi-unit, tri-chemistry, with display (US, NA plug) |

# Surveillance Accessories

## Earpieces

| | |
|---|---|
| BDN6664 | Earpiece with standard earphone, beige |
| BDN6665 | Earpiece with extra-loud earphone (exceeds OSHA limits), beige |
| BDN6666 | Earpiece with volume control, beige |
| BDN6667 | Earpiece, mic and PTT combined, beige |
| BDN6668 | Earpiece, mic and PTT separate, beige |
| BDN6669 | Earpiece, mic and PTT combined, with extra-loud earphone (exceeds OSHA limits), beige |
| BDN6670 | Earpiece, mic and PTT separate with extra-loud earphone (exceeds OSHA limits), beige |
| BDN6726 | Earpiece with standard earphone, black |
| BDN6727 | Earpiece with extra-loud earphone (exceeds OSHA limits), black |
| BDN6728 | Earpiece with volume control, black |
| BDN6729 | Earpiece, mic and PTT combined, black |
| BDN6730 | Earpiece, mic and PTT separate, black |
| BDN6731 | Earpiece, mic and PTT combined, with extra-loud earphone (exceeds OSHA limits), black |
| BDN6732 | Earpiece, mic and PTT separate, with extra-loud earphone (exceeds OSHA limits), black |
| BDN6780 | Earbud, single with mic and PTT combined, beige |
| BDN6781 | Earbud, single, receive only, black |

## Headsets and Headset Accessories

| | |
|---|---|
| BDN6635 | Heavy-duty VOX headset with noise-canceling boom mic (requires BDN6673 adapter cable) |
| BDN6636 | Heavy-duty VOX headset with throat mic (requires BDN6673 adapter cable) |
| BDN6645 | Noise-canceling boom mic headset with PTT on earcup |
| BDN6673 | Headset adapter cable (for use with BDN6635, BDN6636, and BDN6645) |
| BDN6676 | 3.0 mm threaded adapter jack |
| NMN1020 | Safety helmet headset (requires BDN6676 adapter cable) |
| NMN6245 | Light-weight headset |
| NMN6246 | Ultralite headset with boom mic |
| NMN6258 | Over-the-head headset with in-line PTT |
| NMN6259 | Medium-weight, dual headset with NC mic |
| NTN8613 | Keyload adapter |
| RMN4049 | Temple Transducer |

## Radio Interface Modules for Ear Microphones

| | |
|---|---|
| BDN6641 | Ear mic, high noise level up to 105 dB, grey (must order interface module separately) |
| BDN6677 | Ear mic, standard, noise up to 95 dB (must order interface module separately), black |
| BDN6678 | Ear mic, standard, noise up to 95 dB (must order interface module separately), beige |
| BDN6671 | Push-to-talk (PTT) and voice-activated (VOX) interface module (for use with BDN6641, BDN6677, and BDN6678) |
| BDN6708 | PTT interface module (for use with BDN6641, BDN6677, and BDN6678) |

## Speaker, Remote Speaker and Public Safety Microphones

| | |
|---|---|
| NMN6191 | RSM noise-canceling (includes 6.0' coiled cord assembly, 3.5mm earjack, swivel clip, quick disconnect) |
| NMN6193 | Remote speaker mic |
| NMN6247* | Public safety mic with straight cord, 30" |
| NMN6250* | Public safety mic with straight cord, 24" |
| NMN6251* | Public safety mic with straight cord, 18" |
| RMN5021 | Commander, smart remote speaker mic |
| RMN5023 | Commander, submersible smart remote speaker mic |
| HMN4080 | Global Positioning Satellite (GPS) remote speaker mic |

** For XTS 5000 UHF Range 1 radio models. Use only approved antennas NAE6547 or NAE6549 with these microphones.*

## CommPort Integrated Microphone/Receivers

| | |
|---|---|
| NTN1624 | CommPort with palm PTT |
| NTN1625 | CommPort ear mic with PTT for noise levels up to 100 dB (requires BDN6676 adapter) |
| NTN1663 | CommPort ear mic with ring PTT for noise levels up to 100 dB (requires BDN6676 adapter) |
| NTN1736 | CommPort ear mic with snap-on side PTT for noise levels up to 100 dB (requires BDN6676 adapter) |
| NNTN4186 | CommPort ear mic receiver w/ body PTT |

# Switches

| | |
|---|---|
| 0180300E83 | Remote PTT body switch for EMS |
| NTN7660 | Tilt / man down switch |
| NTN8327 | External RF switch |

# Vehicular Adapters

## Accessories

| | |
|---|---|
| HMN4069 | Next-generation mobile mic |
| HSN1006 | Speaker, 6-watt |
| NKN6455 | Cable, 6-watt speaker |
| NTN1606 | Vehicular adapter, BNC, open face |
| NTN1607 | Vehicular adapter, BNC, closed face |
| NTN8560 | Vehicular adapter, mini-U, open face |
| NTN8561 | Vehicular adapter, mini-U, closed face |
| NTN8940 | Vehicular adapter, trunnion mount |
| NTN9176 | Vehicular charger, XTS, tri-chemistry, compatible with PAC•RT |
| PLN7737 | Handheld control head |
| RLN4884 | XTS travel charger (uses cigarette lighter adapter) |

# Notes

# Glossary

This glossary is a list of specialized terms used in this manual.

| | |
|---|---|
| **ACK** | Acknowledgment of communication. |
| **Active Channel** | A channel that has traffic on it. |
| **Analog Signal** | An RF signal that has a continuous nature rather than a pulsed or discrete nature. |
| **ASTRO 25 Trunking** | Motorola standard for wireless digital trunked communications. |
| **ASTRO Conventional** | Motorola standard for wireless analog or digital conventional communications. |
| **Autoscan** | A feature that allows the radio to automatically scan the members of a scan list. |
| **Call Alert** | Privately page an individual by sending an audible tone. |
| **Carrier Squelch** | Feature that responds to the presence of an RF carrier by opening or unmuting (turning on) a receiver's audio circuit. A squelch circuit silences the radio when no signal is being received so that the user does not have to listen to "noise." |
| **Central Controller** | A software-controlled, computer-driven device that receives and generates data for the trunked radios assigned to it. It monitors and directs the operations of the trunked repeaters. |
| **Channel** | A group of characteristics such as transmit/receive frequency pairs, radio parameters, and encryption encoding. |
| **Control Channel** | In a trunking system, one of the channels that is used to provide a continuous, two-way/data communications path between the central controller and all radios on the system. |

| | |
|---|---|
| **Conventional** | Typically refers to radio-to-radio communications, sometimes through a repeater (see Trunking). |
| **Conventional Scan List** | A scan list that includes only conventional channels. |
| **Digital Private Line (DPL)** | A type of coded squelch using data bursts. Similar to PL except a digital code is used instead of a tone. |
| **Digital Signal** | An RF signal that has a pulsed, or discrete, nature, rather than a continuous nature. |
| **Dispatcher** | An individual who has radio system management duties. |
| **Dynamic Regrouping** | A feature that allows the dispatcher to temporarily reassign selected radios to a single special channel so they can communicate with each other. |
| **Failsoft** | A feature that allows communications to take place even though the central controller has failed. Each trunked repeater in the system will transmit a data word informing every radio that the system has gone into failsoft. |
| **FCC** | Federal Communications Commission. |
| **Hang Up** | Disconnect. |
| **KVL** | Key-variable loader: A device for loading encryption keys into the radio. |
| **LED** | Light-emitting diode. |
| **Monitor** | Check channel activity by pressing the Monitor button. If the channel is clear, you will hear static. If the channel is in use, you will hear conversation. It also serves as a way to check the volume level of the radio, since the radio will “open the squelch” when pressing the monitor button. |

| | |
|---|---|
| **Network Access Code** | Network Access Code (NAC) operates on digital channels to reduce voice channel interference between adjacent systems and sites. |
| **NiCd** | Nickel-cadmium |
| **NiMH** | Nickel-metal-hydride. |
| **Non-tactical/Revert** | The user will talk on a preprogrammed emergency channel. The emergency alarm is sent out on this same channel. |
| **Page** | A one-way alert, with audio messages. |
| **Personality** | A set of unique features specific to a radio. |
| **Preprogrammed** | Refers to a software feature that has been activated by a qualified radio technician. |
| **Private (Conversation) Call** | A feature that lets you have a private conversation with another radio user in the group. |
| **Private Line (PL)** | A sub-audible tone that is transmitted such that only receivers decoding the tone will receive it. |
| **Programmable** | Refers to a radio control that can have a radio feature assigned to it. |
| **PTT** | Push-To-Talk — the **PTT button** engages the transmitter and puts the radio in transmit (send) operation when pressed. |
| **Radio Frequency (RF)** | The part of the general frequency spectrum between the audio and infrared light regions (about 10 kHz to 10,000,000 MHz). |
| **Repeater** | A conventional radio feature, where you talk through a receive/transmit facility that re-transmits received signals, in order to improve communications range and coverage. |

| | |
|---|---|
| **Selective Call** | A feature that allows you to call a select individual, intended to provide privacy and to eliminate the annoyance of having to listen to conversations of no interest to you. |
| **Selective Switch** | Any digital P25 traffic having the correct Network Access Code and the correct talkgroup. |
| **Squelch** | Special electronic circuitry, added to the receiver of a radio, that reduces, or cuts off, unwanted signals before they are heard in the speaker. |
| **Standby** | An operating condition whereby the radio's speaker is muted but still continues to receive data. |
| **Tactical/Non-revert** | The user will talk on the channel that was selected before the radio entered the emergency state. |
| **Talkaround** | Bypass a repeater and talk directly to another unit for easy local unit-to-unit communications. |
| **Trunking** | The automatic sharing of communications paths between a large number of users (see Conventional). |
| **Zone** | A grouping of channels. |

# Commercial Warranty

**Limited Warranty**

**MOTOROLA COMMUNICATION PRODUCTS**

**I. WHAT THIS WARRANTY COVERS AND FOR HOW LONG:**

MOTOROLA INC. (“MOTOROLA”) warrants the MOTOROLA manufactured Communication Products listed below (“Product”) against defects in material and workmanship under normal use and service for a period of time from the date of purchase as scheduled below:

| | |
|---|---|
| ASTRO XTS 5000 Portable Units | One (1) Year |
| Product Accessories | One (1) Year |

Motorola, at its option, will at no charge either repair the Product (with new or reconditioned parts), replace it (with a new or reconditioned Product), or refund the purchase price of the Product during the warranty period provided it is returned in accordance with the terms of this warranty. Replaced parts or boards are warranted for the balance of the original applicable warranty period. All replaced parts of Product shall become the property of MOTOROLA.

This express limited warranty is extended by MOTOROLA to the original end user purchaser only and is not assignable or transferable to any other party. This is the complete warranty for the Product manufactured by MOTOROLA. MOTOROLA assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of MOTOROLA. Unless made in a separate agreement between MOTOROLA and the original end user purchaser, MOTOROLA does not warrant the installation, maintenance or service of the Product.

MOTOROLA cannot be responsible in any way for any ancillary equipment not furnished by MOTOROLA which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such equipment is expressly excluded from this warranty. Because each system which may use

the Product is unique, MOTOROLA disclaims liability for range, coverage, or operation of the system as a whole under this warranty.

**II. GENERAL PROVISIONS:**

This warranty sets forth the full extent of MOTOROLA'S responsibilities regarding the Product. Repair, replacement or refund of the purchase price, at MOTOROLA's option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

**III. STATE LAW RIGHTS:**

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY.

This warranty gives specific legal rights, and there may be other rights which may vary from state to state.

**IV. HOW TO GET WARRANTY SERVICE:**

You must provide proof of purchase (bearing the date of purchase and Product item serial number) in order to receive warranty service and, also, deliver or send the Product item, transportation and insurance prepaid, to an authorized warranty service location. Warranty service will be provided by Motorola through one of its authorized warranty service locations. If you first contact the company

which sold you the Product, it can facilitate your obtaining warranty service. You can also call Motorola at 1-888-567-7347 US/Canada.

**V. WHAT THIS WARRANTY DOES NOT COVER:**

A) Defects or damage resulting from use of the Product in other than its normal and customary manner.

B) Defects or damage from misuse, accident, water, or neglect.

C) Defects or damage from improper testing, operation, maintenance, installation, alteration, modification, or adjustment.

D) Breakage or damage to antennas unless caused directly by defects in material workmanship.

E) A Product subjected to unauthorized Product modifications, disassemblies or repairs (including, without limitation, the addition to the Product of non-Motorola supplied equipment) which adversely affect performance of the Product or interfere with Motorola's normal warranty inspection and testing of the Product to verify any warranty claim.

F) Product which has had the serial number removed or made illegible.

G) Rechargeable batteries if:

- any of the seals on the battery enclosure of cells are broken or show evidence of tampering.
- the damage or defect is caused by charging or using the battery in equipment or service other than the Product for which it is specified.

H) Freight costs to the repair depot.

I) A Product which, due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with MOTOROLA’s published specifications or the FCC type acceptance labeling in effect for the Product at

the time the Product was initially distributed from MOTOROLA.

J) Scratches or other cosmetic damage to Product surfaces that does not affect the operation of the Product.

K) Normal and customary wear and tear.

**VI. PATENT AND SOFTWARE PROVISIONS:**

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a United States patent, and MOTOROLA will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

A) that MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim;

B) that MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise; and

C) should the Product or parts become, or in MOTOROLA's opinion be likely to become, the subject of a claim of infringement of a United States patent, that such purchaser will permit MOTOROLA, at its option and expense, either to procure for such purchaser the right to continue using the Product or parts or to replace or modify the same so that it becomes non-infringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for

the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or used in connection with the Product. The foregoing states the entire liability of MOTOROLA with respect to infringement of patents by the Product or any parts thereof.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software such as the exclusive rights to reproduce in copies and distribute copies of such Motorola software. MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise of rights in such MOTOROLA software is permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.

**VII. GOVERNING LAW:**

This Warranty is governed by the laws of the State of Illinois, USA.

# Notes

# Appendix: Maritime Radio Use in the VHF Frequency Range

## Special Channel Assignments

### Emergency Channel

If you are in imminent and grave danger at sea and require emergency assistance, use **VHF Channel 16** to send a distress call to nearby vessels and the United States Coast Guard. Transmit the following information, in this order:

**1** "MAYDAY, MAYDAY, MAYDAY."

**2** "THIS IS _____, CALL SIGN _____."

*State the name of the vessel in distress **3 times**, followed by the call sign or other identification of the vessel, stated **3 times**.*

**3** Repeat "MAYDAY" and the name of the vessel.

**4** "WE ARE LOCATED AT _____."

*State the position of the vessel in distress, using any information that will help responders to locate you, e.g.:*

- *latitude and longitude*
- *bearing (state whether you are using true or magnetic north)*
- *distance to a well-known landmark*
- *vessel course, speed or destination*

**5** State the nature of the distress.

**6** Specify what kind of assistance you need.

**7** State the number of persons on board and the number needing medical attention, if any.

**8** Mention any other information that would be helpful to responders, such as type of vessel, vessel length and/or tonnage, hull color, etc.

**9** "OVER."

**10** Wait for a response.

**11** If you do not receive an immediate response, remain by the radio and repeat the transmission at intervals until you receive a response. Be prepared to follow any instructions given to you.

### Non-Commercial Call Channel

For non-commercial transmissions, such as fishing reports, rendezvous arrangements, repair scheduling, or berthing information, use **VHF Channel 9**.

## Operating Frequency Requirements

A radio designated for shipboard use must comply with Federal Communications Commission Rule Part 80 as follows:

- on ships subject to Part II of Title III of the Communications Act, the radio must be capable of operating on the 156.800 MHz frequency
- on ships subject to the Safety Convention, the radio must be capable of operating:
  - in the simplex mode on the ship station transmitting frequencies specified in the 156.025–157.425 MHz frequency band, and
  - in the semiduplex mode on the two frequency channels specified in the table below.

**Note:** Simplex channels 3, 21, 23, 61, 64, 81, 82, and 83 **cannot be lawfully used** by the general public in US waters.

Additional information about operating requirements in the Maritime Services can be obtained from the full text of FCC Rule Part 80 and from the US Coast Guard.

**Table A-1: VHF Marine Channel List**

| Channel Number | Frequency (MHz) | |
|---|---|---|
| | Transmit | Receive |
| 1 | 156.050 | 160.650 |
| 2 | 156.100 | 160.700 |
| * | 156.150 | 160.750 |
| 4 | 156.200 | 160.800 |
| 5 | 156.250 | 160.850 |
| 6 | 156.300 | – |
| 7 | 156.350 | 160.950 |

**Table A-1: VHF Marine Channel List (Continued)**

| Channel Number | Frequency (MHz) | |
|---|---|---|
| | Transmit | Receive |
| 8 | 156.400 | – |
| 9 | 156.450 | 156.450 |
| 10 | 156.500 | 156.500 |
| 11 | 156.550 | 156.550 |
| 12 | 156.600 | 156.600 |
| 13** | 156.650 | 156.650 |
| 14 | 156.700 | 156.700 |
| 15** | 156.750 | 156.750 |
| 16 | 156.800 | 156.800 |
| 17** | 156.850 | 156.850 |
| 18 | 156.900 | 161.500 |
| 19 | 156.950 | 161.550 |
| 20 | 157.000 | 161.600 |
| * | 157.050 | 161.650 |
| 22 | 157.100 | 161.700 |
| * | 157.150 | 161.750 |
| 24 | 157.200 | 161.800 |
| 25 | 157.250 | 161.850 |
| 26 | 157.300 | 161.900 |
| 27 | 157.350 | 161.950 |
| 28 | 157.400 | 162.000 |
| 60 | 156.025 | 160.625 |
| * | 156.075 | 160.675 |
| 62 | 156.125 | 160.725 |
| 63 | 156.175 | 160.775 |
| * | 156.225 | 160.825 |
| 65 | 156.275 | 160.875 |
| 66 | 156.325 | 160.925 |

**Table A-1: VHF Marine Channel List (Continued)**

| Channel Number | Frequency (MHz) | |
|---|---|---|
| | Transmit | Receive |
| 67** | 156.375 | 156.375 |
| 68 | 156.425 | 156.425 |
| 69 | 156.475 | 156.475 |
| 71 | 156.575 | 156.575 |
| 72 | 156.625 | – |
| 73 | 156.675 | 156.675 |
| 74 | 156.725 | 156.725 |
| 75 | *** | *** |
| 76 | *** | *** |
| 77** | 156.875 | – |
| 78 | 156.925 | 161.525 |
| 79 | 156.975 | 161.575 |
| 80 | 157.025 | 161.625 |
| * | 157.075 | 161.675 |
| * | 157.125 | 161.725 |
| * | 157.175 | 161.775 |
| 84 | 157.225 | 161.825 |
| 85 | 157.275 | 161.875 |
| 86 | 157.325 | 161.925 |
| 87 | 157.375 | 161.975 |
| 88 | 157.425 | 162.025 |

* *Simplex channels 3, 21, 23, 61, 64, 81, 82, and 83* ***cannot be lawfully used*** *by the general public in US waters.*

** *Low power (1 W) only*

*** *Guard band*

***Note:*** *A – in the Receive column indicates that the channel is transmit only.*

# Index


## A

accessories ..... 49
alert tones ..... 5
antenna ..... 10
  attach ..... 10
  radio operating frequencies ..... 46
  remove ..... 10
antennas ..... 49

## B

backlight ..... 4
batteries and battery accessories 49
battery ..... 8
  attach ..... 9
  battery life ..... 44
  charge status ..... 44
  charger ..... 8
  charging ..... 8, 44
  recycling and disposal ..... 45
  remove ..... 9
belt clip ..... 11
  attach ..... 11
  remove ..... 11

## C

carry accessories
  belt clips ..... 50
  belt loops ..... 50
  carry cases ..... 51
common radio features ..... 19
conventional squelch operation .. 19

## D

direct operation
  select ..... 31
dynamic regrouping ..... 36
  reprogram request ..... 37

## E

edit a scan list ..... 25
emergency
  keep alive ..... 23
  send a silent emergency alarm 23
  send an emergency alarm ..... 21
  send an emergency call ..... 22
encryption
  key loading ..... 34
  key zeroization ..... 35
  managing ..... 34
  multikey ..... 34

## F

failsoft ..... 38

## G

general radio operation ..... 1
glossary ..... 57

## H

helpful tips ..... 41

## I

individual calls
  answer a call alert page ..... 30
  answer a phone call ..... 29
  answer a private call ..... 29

## L

LED indicators ..... 4
lists ..... 24
  view a scan list ..... 24
lock or unlock a site ..... 39

## M

mode select button ..... 15

## N

notations used in this manual ..... 1

## O

out-of-range ..... 38

## P

PL defeat .....19
programmable controls .....3

## R

radio
  care
    cleaning .....42
    handling .....43
    things to avoid .....41
  on and off .....13
  turn off .....13
  turn on .....13
receive / transmit
  use preprogrammed monitor button .....17
  use preprogrammed volume set button .....16
  without using volume set and monitor buttons .....16
repeater operation
  select .....31

## S

scan
  delete a nuisance channel .....27
  turn on or off .....27
scan (conventional only)
  make a dynamic priority change .....28
secure operations .....33
select
  a channel .....14
  a zone .....14
  clear transmissions .....33
  enable / disable .....37
  repeater or direct operation .....31
  secure transmissions .....33
selectable power level .....19
selective call
  answer .....30
service .....43
site
  change the current site .....39
  lock .....39
smart PTT (conventional only) .....32
special radio features .....33
standard accessories .....8
surveillance accessories .....52
  CommPort integrated microphone/ receivers .....54
  earpieces .....52
  headsets and headset accessories .....53
  radio interface modules for ear microphones .....53
  speaker, remote speaker and public safety microphones .....54
switches .....55

## T

time-out timer .....20
trunking system controls .....38

## U

universal connector cover .....12
  attach .....12
  remove .....12

## V

vehicular adaptors
  accessories .....55

## W

warranty .....61

## X

XTS 5000 model I radio .....2
  physical features .....3

## Z

zones and channels .....14

Motorola, Inc.
1301 E. Algonquin Rd.
Schaumburg, IL60196-1078, U.S.A.

MOTOROLA, the Stylized M Logo and ASTRO are registered in the U.S. Patent & Trademark Office. All other product or service names are the property of their respective owners.
© 2001, 2002, 2003, 2005 and 2008 by Motorola, Inc.
All rights reserved.

6881094C25-G